BRIGMTON

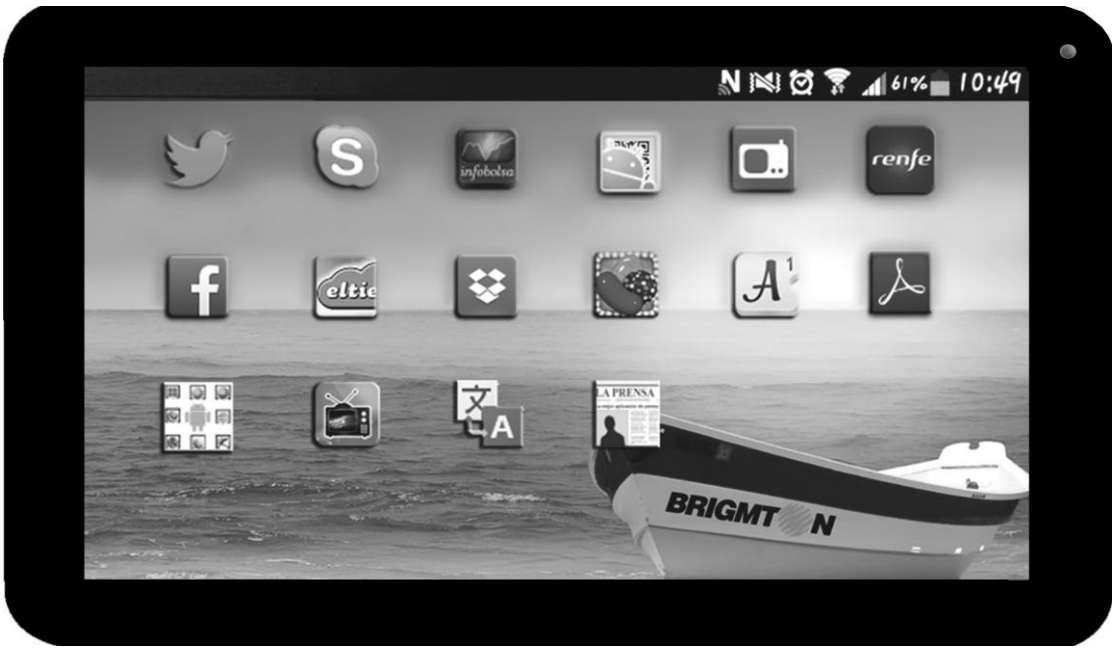

BTPC-904DC-B-N

TABLET PC 9”-DUAL CORE-WIFI-ANDROID 4.2

Manual de Instrucciones

ÍNDICE

INSTRUCCIONES DE FUNCIONAMIENTO
- INTRODUCCIÓN
- LISTA DE APLICACIONES

CONFIGURACIÓN
- CONEXIONES INALÁMBRICAS Y REDES
- PANTALLA Y SONIDO
- APLICACIONES
- IDIOMA Y ENTRADA
- COPIA DE SEGURIDAD Y RESET
- FECHA Y HORA
- SOBRE EL DISPOSITIVO

REPRODUCTOR HD

MÚSICA

CÁMARA

NAVEGADOR

INSTRUCCIONES DE FUNCIONAMIENTO

INTRODUCCIÓN

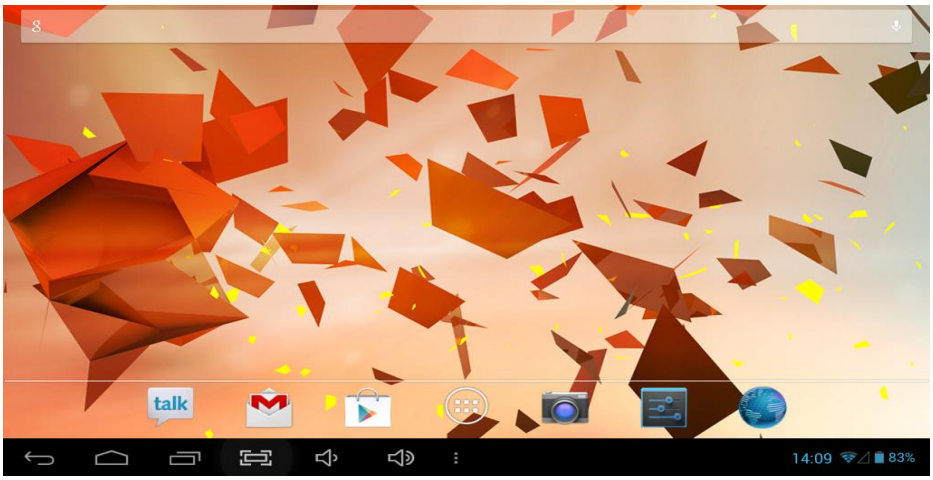

Volver

Inicio

En ejecución

Captura de pantalla

Volumen +/-

Menú Opciones

Menú de aplicaciones

Estado conexión USB

Entrada de voz

Hora / Señal WIFI / Señal 3G / Estado batería

Barra Google

LISTA DE APLICACIONES

Pulse en el icono de aplicaciones para acceder al menú de aplicaciones:

Podrá cambiar el sitio de un aplicación manteniéndola pulsada y soltándola en el lugar deseado.

Haga clic en WIDGETS para acceder a los iconos de aplicaciones útiles:

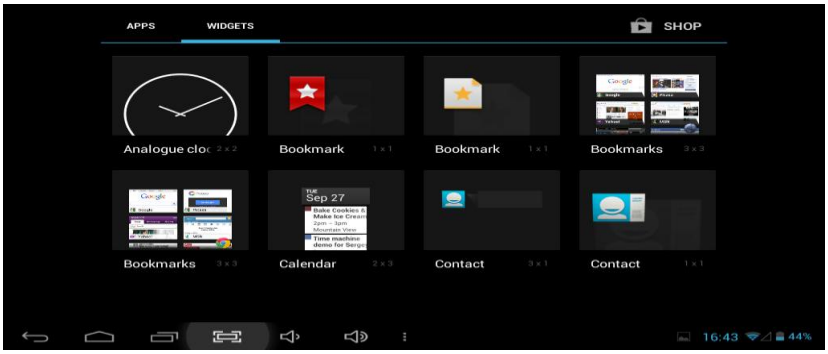

CONFIGURACIÓN

CONEXIONES INALÁMBRICAS Y REDES

Seleccione Wi-Fi para acceder al menú de WIFI:

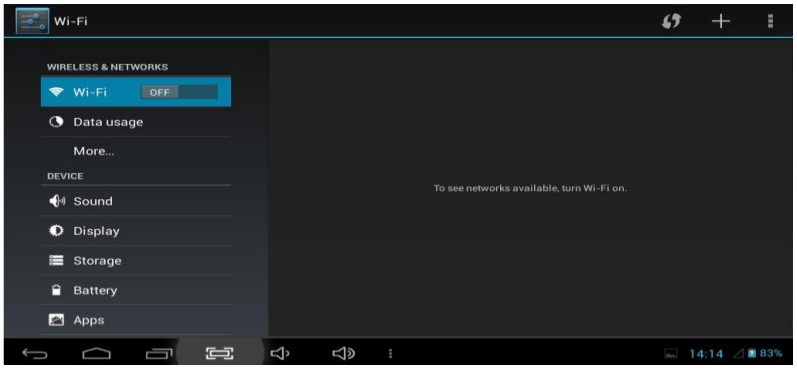

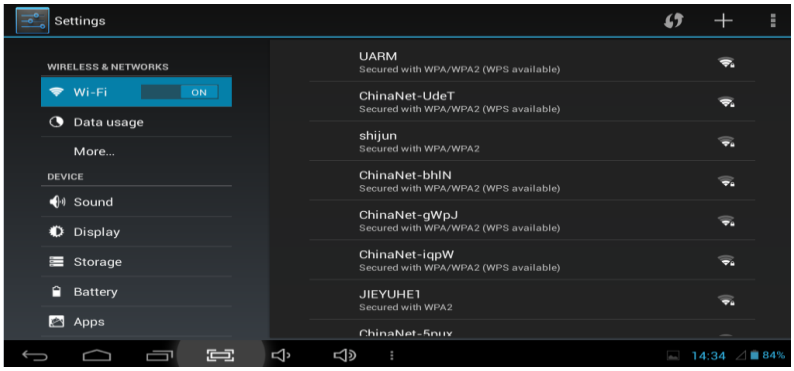

Active la función WiFi y el dispositivo comenzará a buscar redes WiFi automáticamente.

Cuando se muestre este icono la red requerirá una contraseña, para ello aparecerá la siguiente ventana:

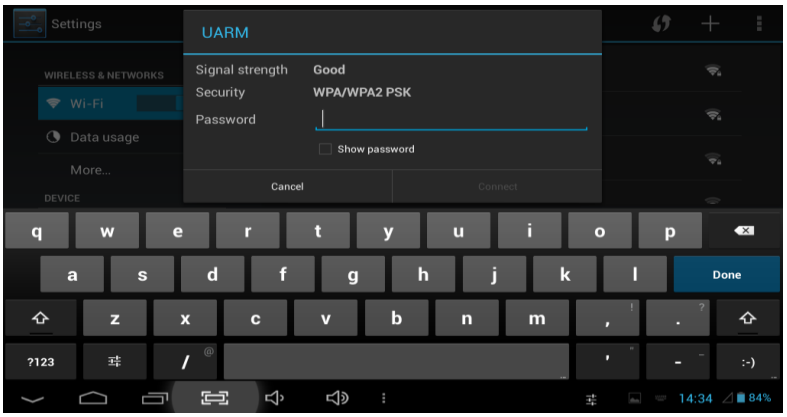

PANTALLA Y SONIDO

En el menú de configuración seleccione Sound:

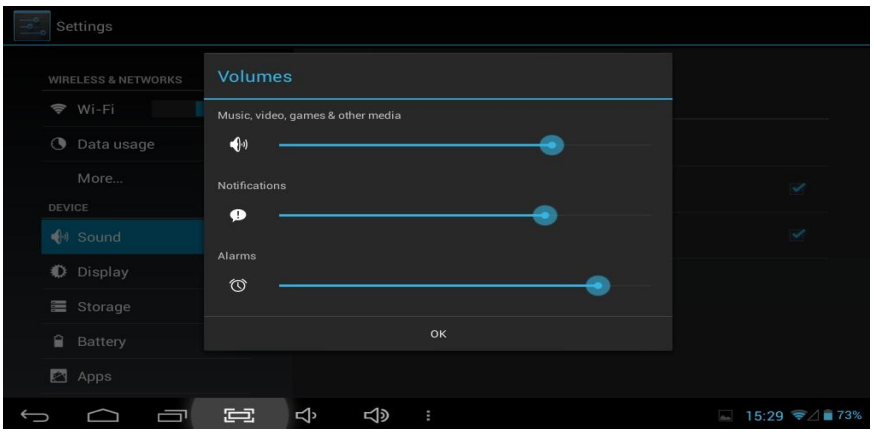

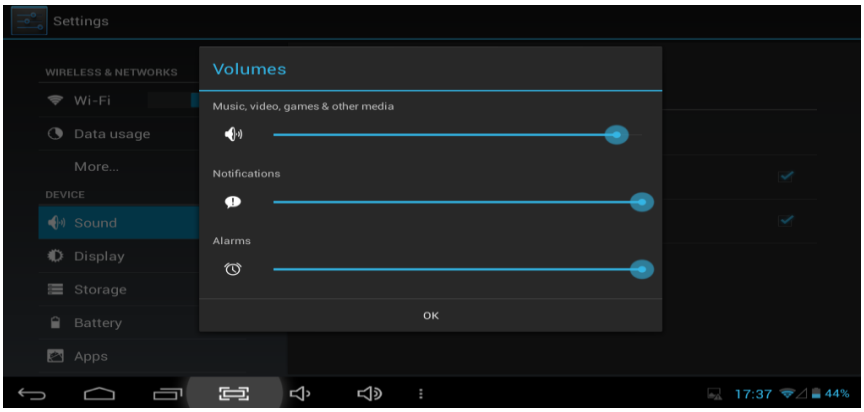

Podrá ajustar el volumen de determinados avisos y aplicaciones.

En el menú de configuración seleccione PANTALLA:

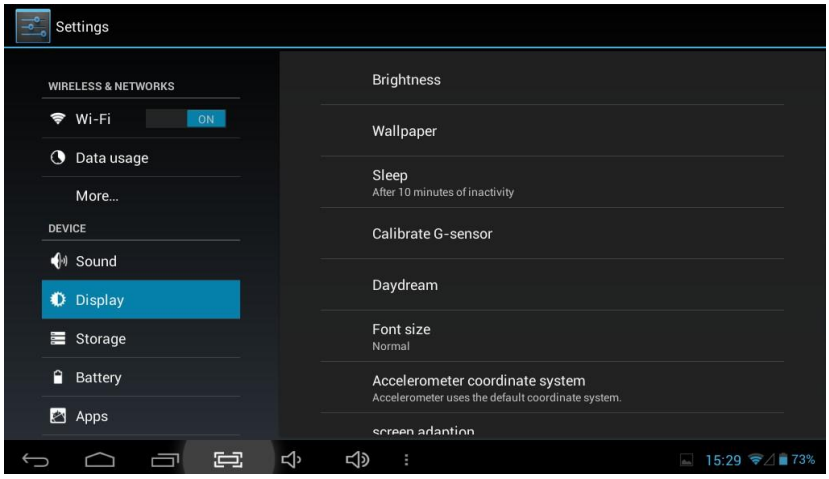

Brightness Brillo

Wallpaper Salva pantallas

Sleep
After 10 minutes of inactivity Función Sleep

Calibrate G-sensor Calibración

Daydream Apagado auto de pantalla

Font size
Normal Tamaño de fuente

Accelerometer coordinate system
Accelerometer uses the default coordinate system. Sietema coordinado de acelerómetro

screen adaption
Used to adjust size of some games display screen Ajuste de pantalla para APK especiales

APLICACIONES

Gestión de aplicaciones: Haga clic en el icono

del menú de configuración para entrar en la configuración de aplicaciones:

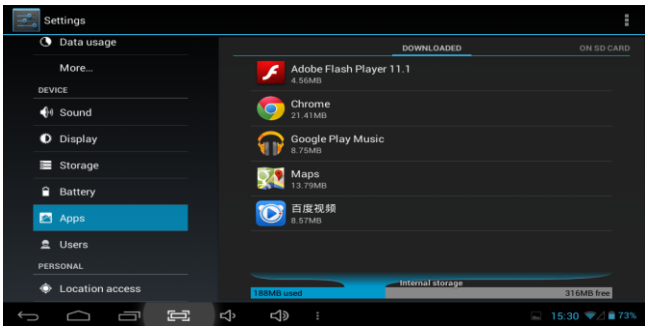

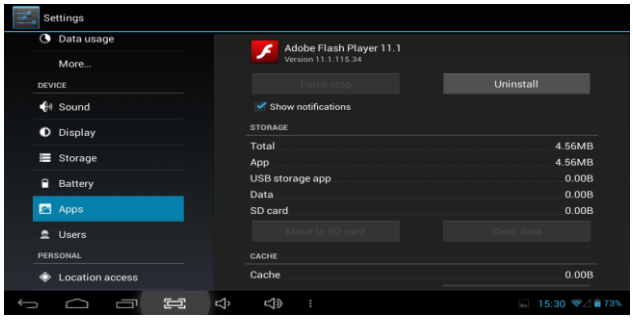

IDIOMA Y ENTRADA

Haga clic en

para ajustar los valores de indioma y entrada de texto:

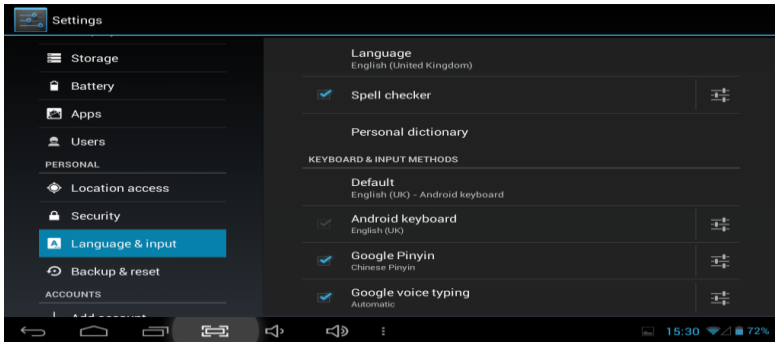

COPIA DE SEGURIDAD Y RESET

Seleccione

, 

,

para configurar opciones de copia de seguridad y volver a los valores de fábrica:

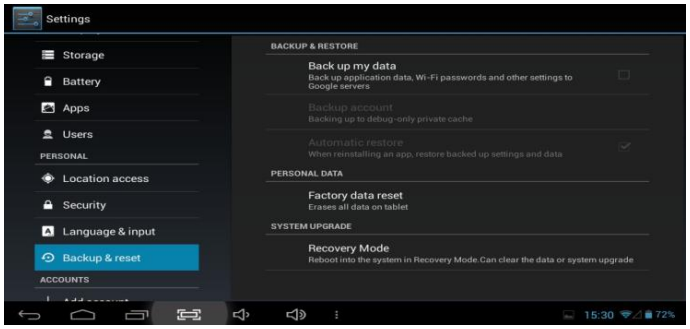

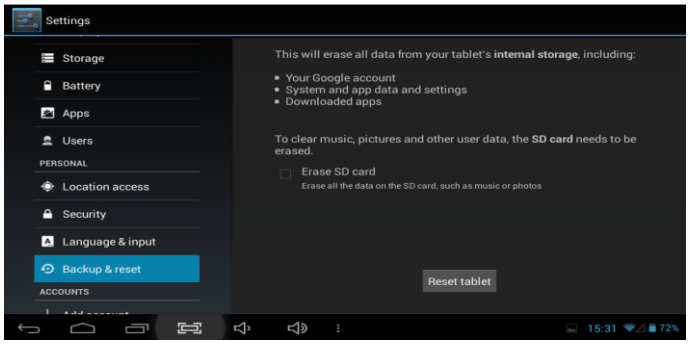

NOTA: Al efectuar la función RESET, todas las APK desaparecerán.

FECHA Y HORA

Seleccione

en el menú configuración para acceder a los ajustes de fecha y hora:

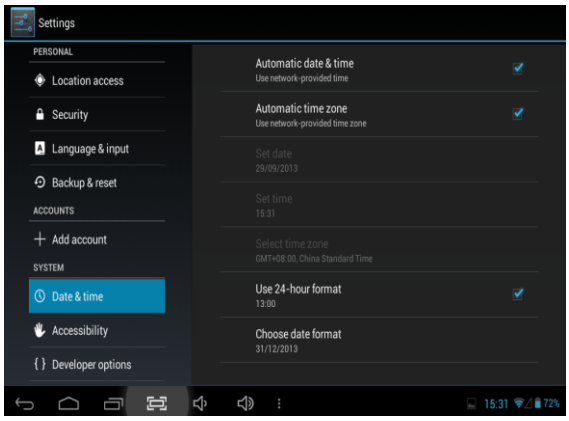



Fecha y hora automática



Zona automática

Establecer la fecha actual



Establecer la hora actual



Establecer la zona

SOBRE EL DISPOSITIVO

Seleccione esta opción para obtener iinformaciónj a cerca del dispositivo:

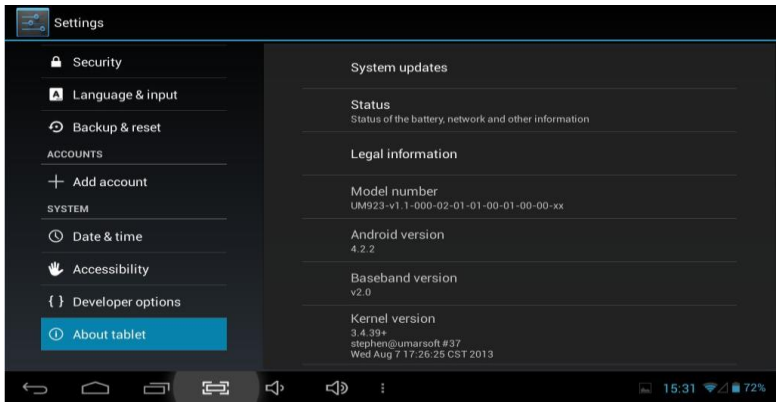

REPRODUCTOR HD

Seleccione el icono de reproductor de vídeo

y accederá a la galería:

Para funciones adicionales, mantenga pulsado el archivo elegido.

Para reproducir archivos almacenados en la tarjeta micro SD seleccione 

, 

y

MÚSICA

Seleccione el icono de música

:

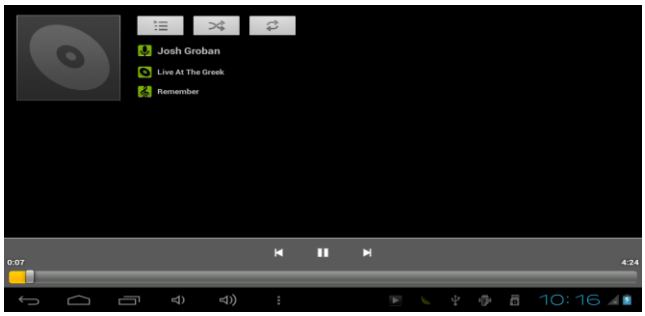

CÁMARA

Seleccione el icono

para entrar en el modo de cámara:

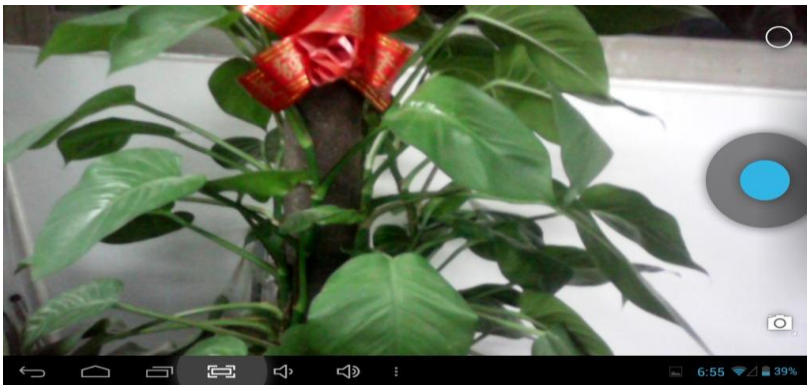

Para hacer una foto:

Seleccione la cámara de vídeo o fotos.

Pulse el icono de disparo.

 Seleccione la cámara delantera o trasera.

Ajuste la exposición.

Menú de configuración de cámara

Modos

NAVEGADOR

Seleccione el icono

para abrir el navegador:

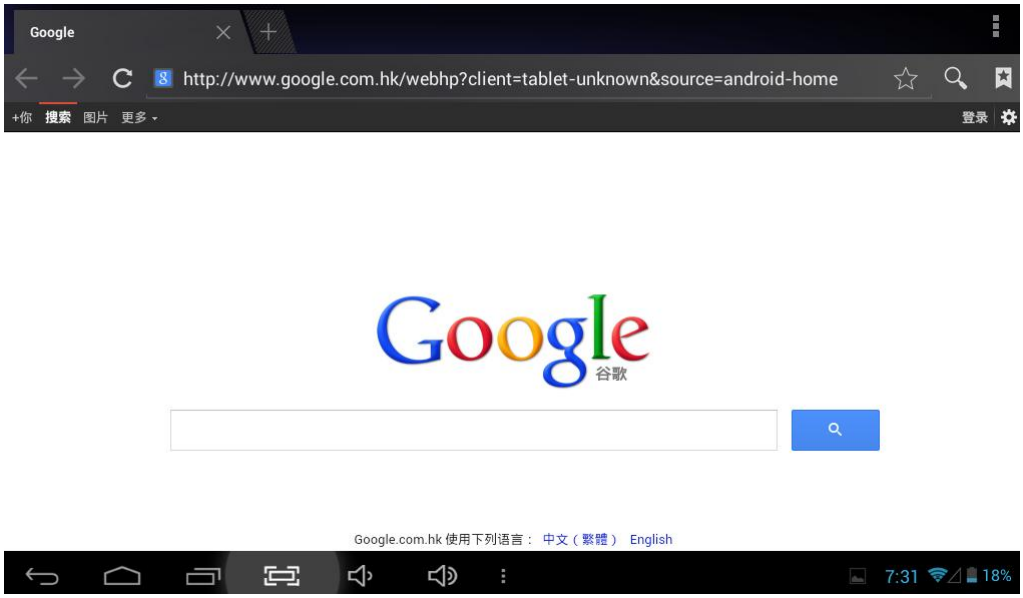

Para navegar debe tener conexión a internet.

"Las especificaciones pueden cambiar sin previo aviso"

IMPORTADO
I.R.P., S.L.
AVDA. SANTA CLARA DE CUBA 5
SEVILLA, SPAIN

BRIGMTON

DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

ETSI EN 301 489-1 V1.8.1 (2008)
ETSI EN 301 489-17 V2.1.1 (2009)
ETSI EN 300328 V1.7.1: 2006
EN 50371: 2002
EN60950-1:2006+A12: 2011

Descripción del aparato:

Modelo BRIGMTON **BTPC-904DC-B-N**
Dispositivo de conexión a internet

Importador: I.R.P., S.L.
Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.

BTPC-904DC-B-N

TABLET PC 9”-DUAL CORE-WIFI-ANDROID 4.2

Instruction Manual

OPERATING INSTRUCTIONS
- INTRODUCTION
- LIST OF APPLICATIONS

CONFIGURATION
- WIRELESS & NETWORKS
- SCREEN AND SOUND
- APPLICATIONS
- LANGUAGE AND ENTRY
- BACKUP AND RESET
- DATE AND TIME
- ON THE DEVICE

HD PLAYER

MUSIC

CAMERA

BROWSER

OPERATION INSTRUCTIONS

INTRODUCTION

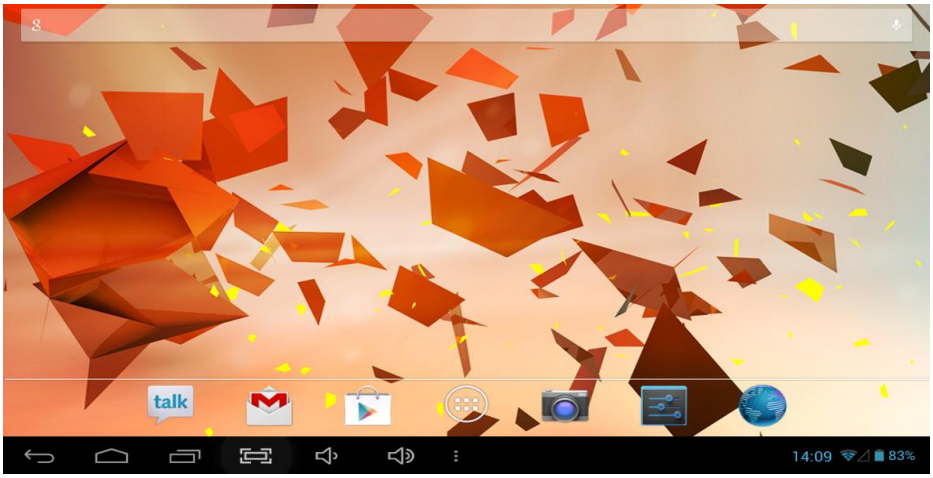

Return

Home

Running Program under background

Screenshot

Voice - Voice +

Fast enter system settings and Manage apps

Application Menu

USB Connected

Voice input

Time / WIFI / External 3G dongle signal / Battery

Google search

APPLICATION LIST

Click icon into applications menu:

Note: Long pressing an application icon can add shortcut to the desktop automatically

Click WIDGETS icon to view widgets:

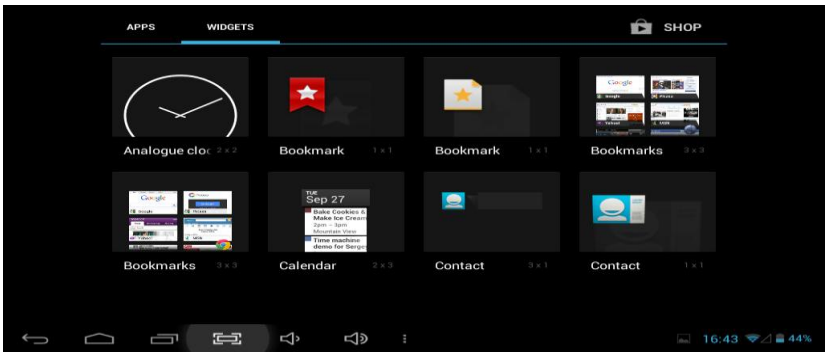

Note: Long pressing any widgets; you can create a shortcut on the desktop

SETTINGS

WIRELESS & NETWORKS

Click Wi-Fi icon, then select wireless & network:

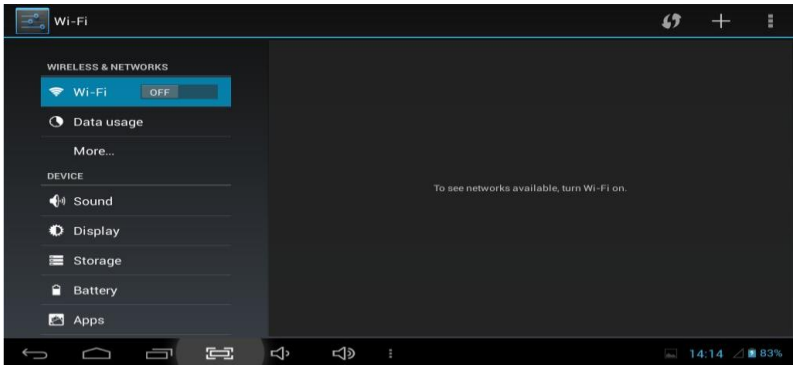

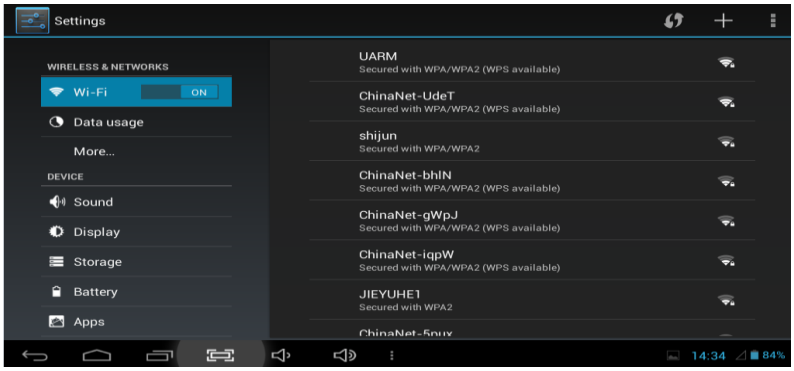

Wi-Fi settings

Turn on Wi-Fi, tablet can search for nearby Wi-Fi networks automatically and display related information. Choose WIFI router.

If it displays locked as , you need type password before connection:

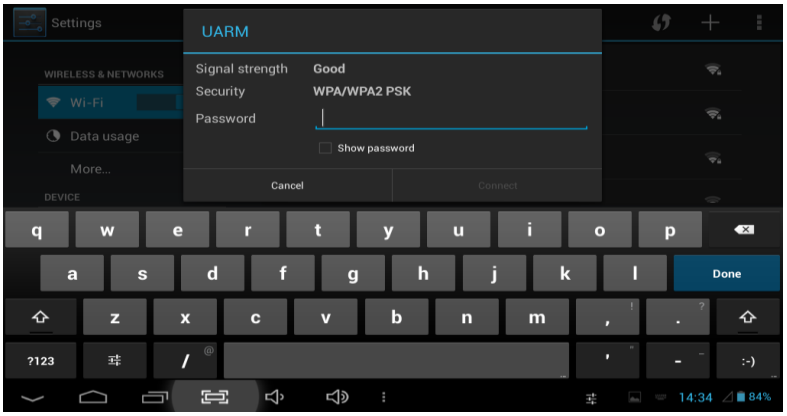

SOUND AND DISPLAY

Click to set volume

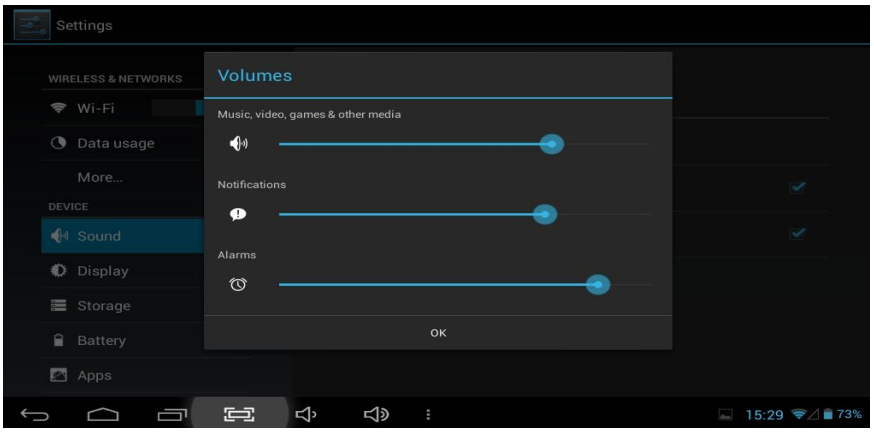

Click icon to adjust the volume

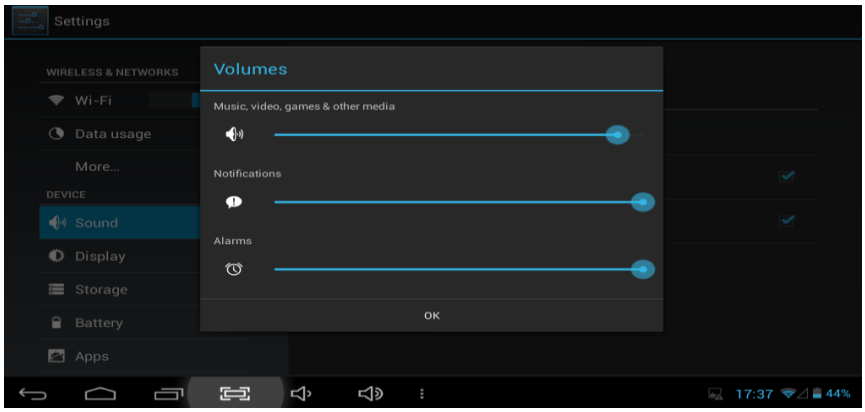

Brightness	LCD Brightness setting
Wallpaper	Set wallpaper
Sleep After 10 minutes of inactivity	Set sleep interval
Calibrate G-sensor	Calibrate
Daydream	Set screen protect
Font size Normal	Adjust font size
Accelerometer coordinate system Accelerometer uses the default coordinate system.	Select an accelerometer coordinate system
screen adaption Used to adjust size of some games display screen .	Adjust screen adaption

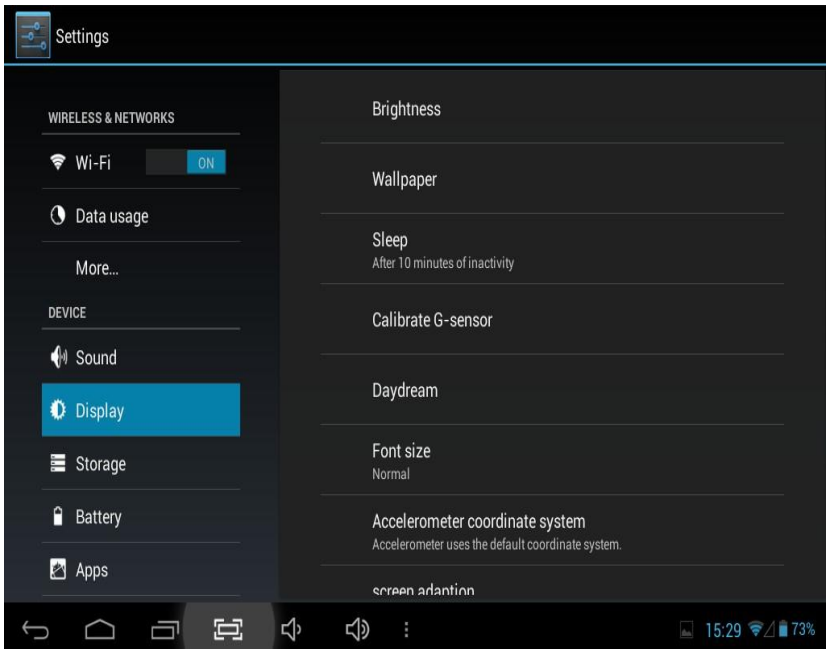

APPS

Click Apps into application settings interface. You can see all application details and uninstall programs completely.

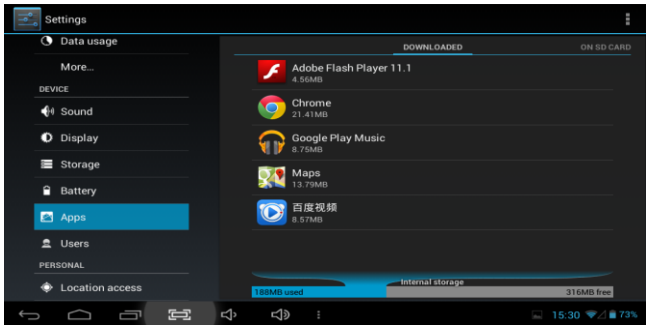

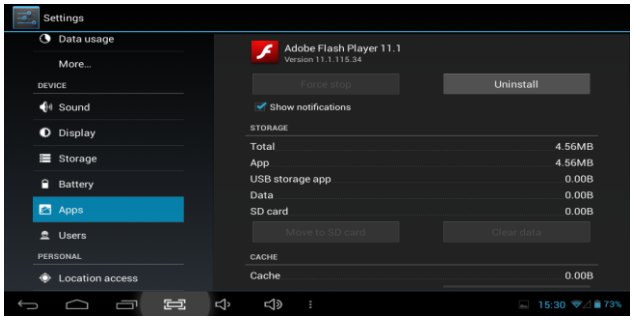

LANGUAGE & INPUT

Click Language & input to set native language.

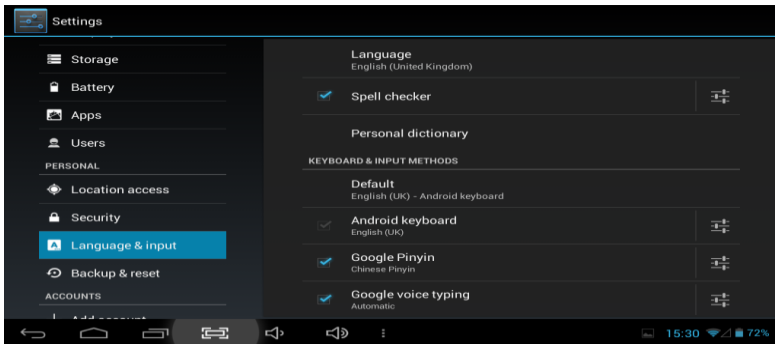

BACKUP & RESET

Click Backup & reset → Factory data reset Erases all data on tablet → Reset tablet icon to reset tablet:

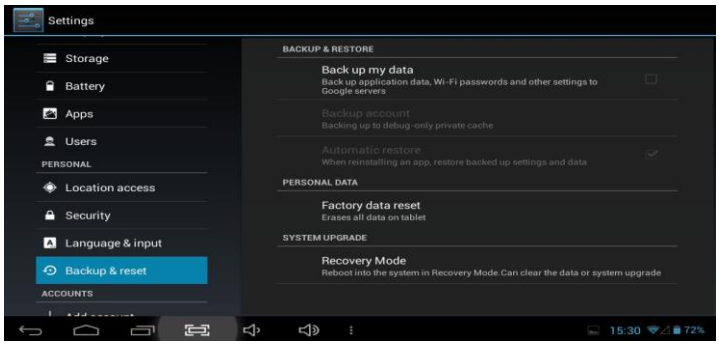

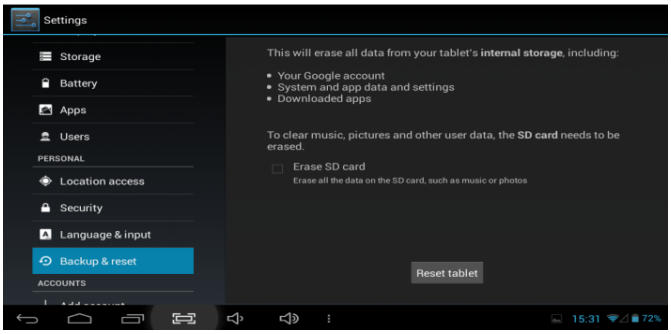

Note: All applications are installed by user will be disappeared.

DATE & TIME

Click Date & time to set date and time:

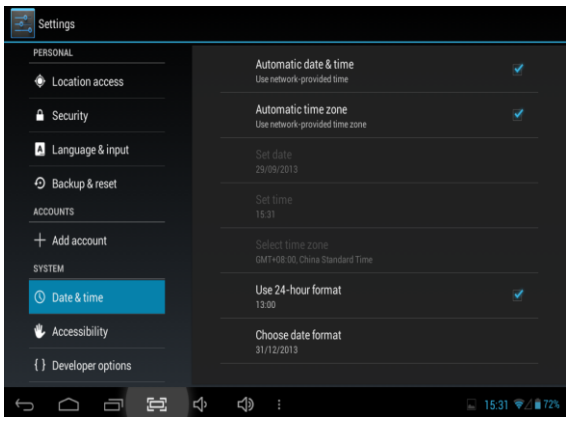

Automatic date & time Use network-provided time	Obtain the time automatically
Automatic time zone Use network-provided time zone	Obtain the time zone automatically
Set date 5/9/2012	Set current date
Set time 06:24	Set current time
Select time zone GMT+00:00, GMT+00:00	Select time zone for your location

About tablet

You can check the Tablet detail information:

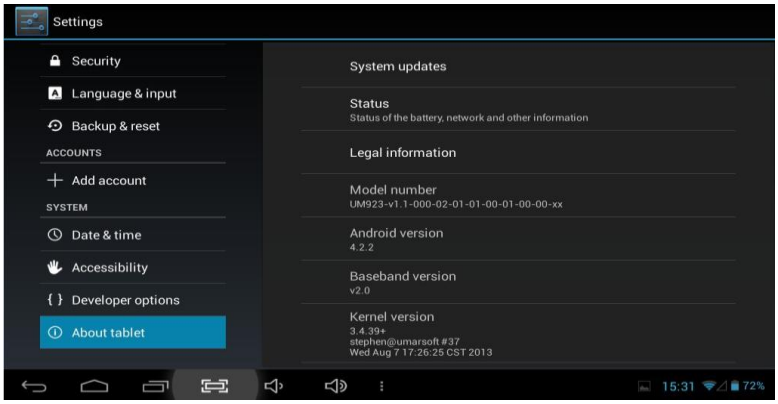

HD PLAYER

Click

icon to browse picture and video:

Note: It needs some time to load all files at first time. Press one file 2S for more advanced operation.

If you want to browse the file from TF card, please make sure Storage → Enable media scanning on extsd choose .

MUSIC

Click Music icon to play music:

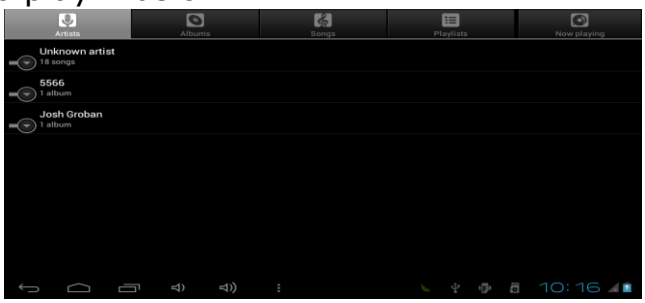

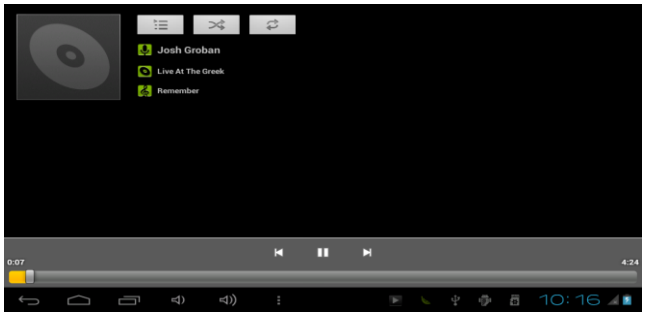

CAMERAS

Click Camera icon into camera interface:

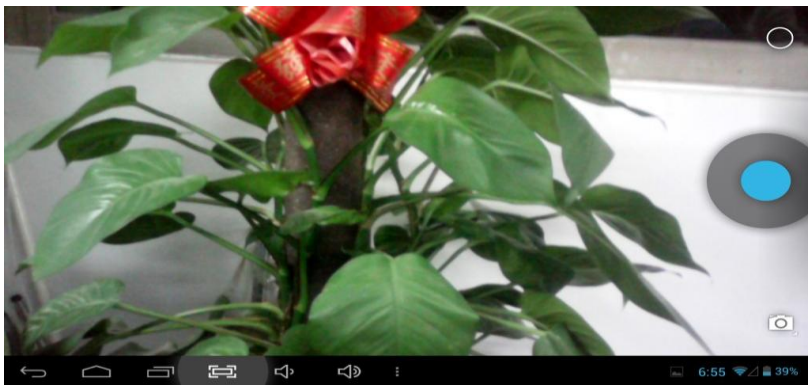

 Take photo

Click this icon you would find Small window

Switch camera/video recorder

Click this icon you would find  Switch front and rear camera

Exposure

Camera setting

Different mode

BROWSER

Click icon to browse web page:



Make sure the internet is connected.

"Features can change without notice"

Imported: I.R.P., S.L.
Avda. Santa Clara de Cuba 5
41007 Sevilla
Spain

DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

ETSI EN 301 489-1 V1.9.2 (2011)
ETSI EN 301 489-17 V2.1.1 (2009)
ETSI EN 300328 V1.7.1: 2006
EN 62479: 2010
EN60950-1:2006+A11:2009+A1:2010+A12: 2011

Description of apparatus:

BRIGMTON Model **BTPC-904DC-B-N**
Movile Internet Device

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.